

All Series except V00 Series

Field Attachable Inserts and ferrules can be ordered individually, or as complete Couplings. Each Series of Ferrule is specific to a hose type as detailed on the previous page.

For all Series except V00 Series*, the following method is used:

Example 1

(a) Individually

To order 1/2" NPT male insert and ferrule for 1/2" two wire non-skive hose (T2A).

Order insert **609-0808** (600 Series). See NPT 600 Series Inserts on page 149.

Order ferrule **L00-08**.

L00 Series ferrules are used on T2A hose; see chart on page 144, or chart for Couplings Selection on T2A page 21.

Dash Size -08 part of L00-08 comes from 1/2" hose = 8/16" = -08; or from the charts.


(b) Complete Coupling

Order **L09-0808**.


Simply replace the first character of the insert's part number with the first character of the ferrules part number.

(replace 6 with L) = 609-0808 → L09-0808


609-0808 insert

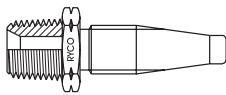

Plus L00-08 ferrule equals

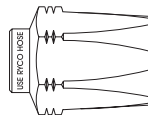

L09-0808 complete coupling

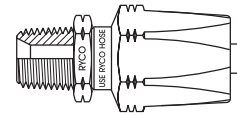

Example 2

(a) Individually

To order 3/4"-16 JIC female insert and ferrule for 3/8" two wire skive hose (AS2D).

Order insert **604-0612** (600 Series). See JIC 600 Series Inserts on page 150.

Order ferrule **B00-06**.

B00 Series ferrules are used on AS2D hose; see chart on previous page, or chart for Couplings Selection on AS2D page 31.

Dash Size -06 part of B00-06 comes from 3/8" hose = 6/16" = -06; or from the charts.


(b) Complete Coupling

Order **B04-0612**.


Simply replace the first character of the insert's part number with the first character of the ferrules part number.

(replace 6 with B) = 604-0612 → B04-0612


604-0612 insert

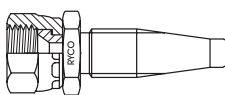

Plus B00-06 ferrule equals

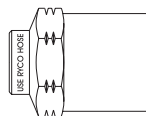

B04-0612 complete coupling

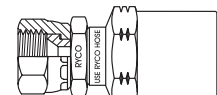

* See pages 136 and 137 for How To Order RYCO V00 Series Field Attachable Couplings for RQP5 and T5 Series Hose.